

DVB-S Meter

smartmeter S1



User Manual

Version: 14.01.2013 - English

Preface

Dear Customer,

Thank you for purchasing the digital DVB-S meter smartmeter S1.

This user manual contains all the information required

- to connect,
- to operate,
- to clean, and
- to dispose of the device.

Please read the user manual carefully before you start using the meter.

smart electronic GmbH
Industriestraße 29
78112 St. Georgen
Germany

Service Hotline: +49 (0) 7724 947 85 55
Telefax: +49 (0) 7724 947 83 33
E-Mail: service@smart-electronic.de
Internet: www.smart-electronic.de

© smart electronic GmbH 2013

All rights, technical changes, errors as well as printing mistakes reserved. Any reproducing or copying of the contents requires prior written permission from smart.

Contents

1	User Information	6
1.1	Use of this Manual	6
1.2	Signs, Symbols, Layout	6
2	Product Description	7
2.1	Scope of Delivery	7
2.2	Meter	8
2.2.1	Front View	8
2.2.2	Top View	9
2.2.3	Bottom View	9
2.2.4	Rear View	9
2.3	Guarantee	9
3	Safety Notes	10
3.1	Safety of persons	10
3.2	Appropriate Usage	10
3.3	Hazards from Improper Use	10
3.4	Lithium Ion Battery	11
4	Initial Setup	11
4.1	Charging the Battery	11
4.1.1	Charge Control	12
4.1.2	State of Charge	12
4.2	Switching the Meter On and Off	12
4.2.1	Switching on	12
4.2.2	Switching off	12
4.3	Entering and Exiting the Menu	13
4.4	Navigating through the Menu	13
5	Aligning the Satellite Dish	13
6	Menu TP Search	15
6.1	Renaming a Satellite	15
6.2	Adding a Satellite	15
6.3	Deleting a Satellite	16
6.4	Searching for a Transponder	16
6.5	Deleting a Transponder	16
6.6	Adding a Transponder	17
6.7	Searching Channels	17
6.8	NIT	18

7	Menu Satellite Identify	19
8	Menu Packet Control	19
8.1	Showing Measurement Values of five Transponders	20
8.2	Searching Channels	20
9	Menu DiSEqC Search	21
10	Menu DiSEqC Motor Search	22
10.1	DiSEqC 1.2	22
10.2	USALS	23
11	Menu Spectrum	23
12	Menu Watch Program	24
12.1	Programmwahl	25
12.1.1	Direct Channel Selection	25
12.1.2	Channel Selection via Selection Window	25
12.1.3	Channel Selection via Search Function	25
12.2	Sorting the Channel List	25
12.3	Switching Between TV Channel List and Radio Channel List	26
12.4	Deleting a Channel from the Channel List	26
13	Menu Settings	26
13.1	Hiding the OSD	27
13.2	Switching off the Screen	27
13.3	Setting Display Brightness	27
13.4	Selecting Energy Unit	27
13.5	Setting Volume Level	27
13.6	Switching On/Off the Beeper	27
13.7	Activating the Automatic Standby Function	27
13.8	Selecting the OSD Language	27
13.9	Restoring Factory Settings	28
14	Menu PC Update	28
14.1	Showing the Software Version	28
14.2	Performing a Software Upgrade	28
14.3	Editing the Channel List	29
14.3.1	Saving the Channel List on a USB disk	29
14.3.2	Editing the Channel List with the Editor Program	30
14.3.3	Loading the Channel List from USB	30
14.4	Media Player	31
14.4.1	Playback of a Music File	31





14.4.2	Playback Mode.....	32
14.4.3	Playback of a Image File	32
14.4.4	Configure a Slide Show	32
14.4.5	Sorting Files.....	33
14.4.6	Playlists.....	33
15	Saving a Screenshot.....	34
16	Operation in a Unicable System.....	34
16.1	About Unicable	34
16.2	Allocation of IF channels and frequencies.....	35
16.3	Installation	35
17	Cleaning the Meter	36
18	Transporting and Storing the Meter	36
19	Troubleshooting.....	37
20	Disposal.....	37
21	Specifications	38
21.1	General	38
21.2	LNB/Tuner input	38
21.3	System Resources.....	38
21.4	Video Decoder	38
21.5	Connections	38
21.6	Power supply.....	39
21.7	Dimensions and Weight.....	39
21.8	Temperatur	39
22	Declaration of Conformity	39

1 User Information

1.1 Use of this Manual

- This manual is intended for the DVB-S Meter DVB-S Metersmartmeter S1.
- Please carefully read this user manual before operating the device for the first time.
- Please note all warnings and notes included in this user manual.
- Consider this user manual to be an integral part of the product, and store it at a well accessible location.
- This user manual should also be enclosed when handing over the device to a third party.
- In case of loss, the current version of the user manual can be downloaded at the support center on our website www.smart-electronic.de.
- The software is still being further developed even after your purchase of the device. Thus, it may be possible that certain operation steps do not fully correspond to the user manual.

1.2 Signs, Symbols, Layout

Symbol/layout	Meaning
	WARNING Danger due to electric shock with possible severe bodily injury
	CAUTION Warning of possible physical damage
	NOTE Useful information and hints
	You are requested to perform an action.
1. 2.	Perform these steps in the stated order.
●	List
<i>Italics</i>	The various possibilities of settings as well as image captions are stated in <i>Italics</i> .
bold	The designations of keys are printed in bold letters.
<i>bold & italics</i>	Menu windows and menu items (that often include further hidden menu items or direct settings) are printed in <i>bold & italic</i> letters.

2 Product Description

The smartmeter S1 is a handy digital antenna measuring device for a quick and easy alignment of satellite antennas. If a satellite is found, the smartmeter S1 shows it on the display and emits an audible signal. Signal strength and quality are displayed as numerical values and bar graphs.

Another measurement value is the forward error correction (FEC) and the bit error rate after Viterbi (VBER). In addition, the picture quality can be revised on the high-resolution 8.9-inch TFTLCD screen.

Many satellites are pre-programmed in order to an quick antenna adjustment.

There is a protective pouch for transport and as a protection.

2.1 Scope of Delivery

Please check if the delivery is complete.


Included in delivery:

- The DVB-S Meter smartmeter S1,
- a 12 V plug-in power supply,
- a 12 V car adapter cable,
- a Quick-F connector,
- a carrying bag,
- a user manual.

If the delivery should be incomplete, contact your specialist dealer the smart electronic GmbH.

2.2 Meter

2.2.1 Front View

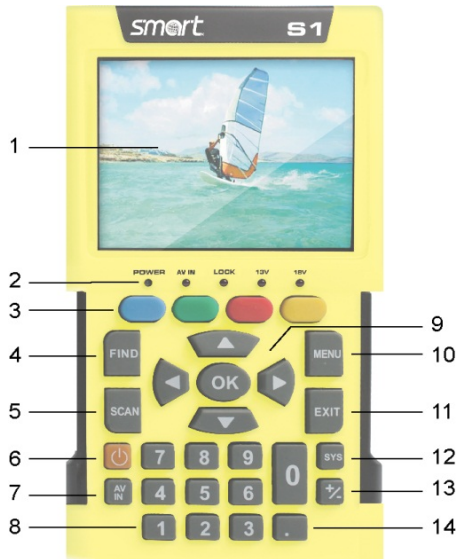


No.	Description		
1	LC-Display	Display of the TV picture, the menu and the measured values.	
2	POWER	LED green the meter is on off the meter is turned off Charging: red during charging green the battery is fully charged	
	AV IN		Lights if the meter is switched to the analog video input.
	LOCK		Lights when a signal is received.
	13V		Lights if there is a 13 V signal for the polarization control (vertical)
	18V	Lights if there is a 18 V signal for the polarization control (horizontal)	
3	FUNCTION keys	Different functions depending on the menu. The functions are displayed at the bottom of the screen.	
4	FIND	Call of the channel search function.	
5	SCAN	Open the Single Satellite Search menu.	
6	POWER	Switch device on/off.	
7	AV IN	Switch to the analog video input.	

No.	Description	
8	Numeric keys	Direct entry of numbers.
9	Cursor-Kreuz	Press to navigate through menus/submenus: Press ▲, ▼ to switch between stations, Press ◀, ▶ to adjust the volume.
	OK	Press to confirm your selection / display station list.
10	MENU	Display the main menu.
11	EXIT	Leave the current menu, cancel operation.
12	SYS	TV mode: call of the menu <i>OSD Setting</i> , Menu: volume control.
13	+/-	Call of the media player.
14	●	Pressing this key copies a screenshot to a connected USB disk.

2.2.2 Top View

No.	Description
1	Digital satellite signal input
2	Analog audio input (mono)
3	Analog video input (Composite Video)

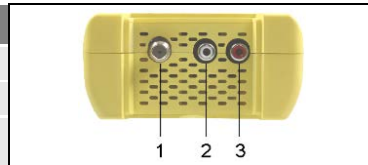

2.2.3 Bottom View

No.	Description
1	Low-voltage socket (for power plug)
2	Switch for battery (for separating the smart-meter S1 electronics from the rechargeable battery)
3	USB port for external data storage devices



The above figures show the smartmeter S1 without the black part covering at the top of the device.

2.2.4 Rear View

At the rear is the battery compartment. Normally, you must not open it. If you suspect that the lithium-ion battery must be replaced, contact your dealer.

2.3 Guarantee

The digital meter smartmeter S1 of smart electronic GmbH comes with a guarantee in accordance with legal requirements as applicable at the time of the purchase.

3 Safety Notes

3.1 Safety of persons

Ensure that nobody can be hurt by falling tools or parts of the satellite antenna during the adjustment and installation of the antenna. For your own security use a rope on sloping roofs.

3.2 Appropriate Usage

The measuring device smartmeter S1 was developed to measure signals of digital satellite antennas and satellite systems. It is exclusively for this purpose and should only be used for this purpose. Use the equipment only for the purpose, which is described in this manual.

Any other usage is rated as not properly and can result in damage or even injury. There will be no liability for damages caused by a non-intended use.

3.3 Hazards from Improper Use



CAUTION!

- Make sure the meter and especially the power plug are always kept dry.
- Do not expose the meter to temperatures below 0° C.
- Connect the power plug only to 100-240 V AC, 50/60 Hz.
- Charge the meter only with the supplied power plug.
- During electrical storms, disconnect the meter from the aerial and from the power supply.
- Do not put heavy objects onto the meter.
- Avoid mechanical influences that can damage e.g. the LCD display or the housing of the meter.
- Do not bend or crimp the cables.
- Do not start to use the meter if you can see signs of damage or if you can hear loose parts inside the device.



WARNING!

Danger of electrical shock from high voltage

Damages on the housing of the power plug or an improperly repaired power plug can expose the user to mains voltage.

- Do not open the supplied power plug.
- Have the power plug repaired by qualified personnel only.



Taking the device from cold into warm temperatures can lead to condensation forming inside the device.

- **Do not connect** the device instantly. Leave it switched off for a few hours.

3.4 Lithium Ion Battery

The smartmeter S1 is provided with a lithium ion battery. Please observe the following safety notes for the battery:



WARNING

Fire and explosion hazard

Any kind of heat (from inside or outside) can trigger uncontrollable chain reactions inside the battery.



WARNING

- Do not store or use the battery in temperatures above 40 °C.
- Never connect the two poles (+ and -).
- Never expose the battery to high temperatures, e.g. close to stoves or cookers or other hot objects.
- Charge the battery only with the supplied power plug.



CAUTION

Risk of injury

Damages on and improper use of the battery can lead to fumes leaking from the battery. When inhaled, these fumes can irritate the respiratory tracts.

- Avoid any damaging of the battery.
- If fumes leak from the battery, open the window and seek medical advice if you experience health problems that may result from inhaling battery fumes.



CAUTION

Damages to other objects

Defective batteries can leak and spill battery liquid onto close-by objects.

- Check the objects affected.
- Clean or, if necessary, replace the objects affected.

4 Initial Setup

4.1 Charging the Battery



- Charge the battery completely before you use the meter for the first time.

The battery can be charged regardless of

- whether the meter is switched on or off or
- whether the battery-switch on the underside of the meter is set to On or Off.

An integrated automatic charging system ensures optimum charging of the battery.

- Switch off the meter, if it is not yet switched off, to ensure that the complete power of the power supply can be used to charge the battery.



Basically, the meter is also charged if it is switched on, then the charging period becomes longer.

- Plug the power plug into a 230-V socket.
- Connect the low-voltage plug of the power plug to the low-voltage socket on the bottom of the meter.

The battery starts charging as soon as you connect the smartmeter S1 to the power plug.




- When you charge the battery for the first time, charge it for at least 5 hours.
The maximum charging time is 12 hours.

4.1.1 Charge Control

- Charging is indicated by a continuously moving battery symbol in the display:



The **POWER LED** lights red.

- Completed charging is indicated by a steady battery symbol filled with four bars: .
The **POWER LED** lights green.

4.1.2 State of Charge

The current status of the battery is continuously displayed:

- If the battery is not adequately charged, the battery charging icon will be displayed in red with 1 or 2 lines (corresponding to the state of charge). You should charge the battery.
- If the battery is sufficiently charged, the battery charging icon will be displayed in green with 3 or 4 lines.

4.2 Switching the Meter On and Off

4.2.1 Switching on

1. Ensure that the battery-switch on the underside of the meter is set to an *ON* position.
2. Press the **power** key to switch on the meter.



In case of disconnected power supply, the smartmeter S1 will be turned on, once you put the battery switch from the OFF to the ON position.

If the power supply is plugged in, the battery switch will be useless, meaning that the smartmeter S1 can be switched on regardless of the switch position.

4.2.2 Switching off

- Press the **power** key once again to switch off the meter after use.



For long operational pauses, please also separate the smartmeter S1 electronics from the battery by setting the battery switch on the underside of the device to the *OFF* position.

4.3 Entering and Exiting the Menu

- Press the **MENU** key to enter the main menu. The display shows the OSD¹ main menu.

The display shows the main menu window when you switch the smartmeter S1 on and when you re-enter the menu.

- Press the **EXIT** key to exit the menu or to return to the previous menu level.



Depending on the submenu you are in, you may have to press the **EXIT** key several times to return to the **main menu**.

4.4 Navigating through the Menu

Use the colored function keys and the navigation keys to navigate through the menu:

- Press **▶** / **the yellow function key** to select the menu item to the right.
- Press **▼** / **the red function key** to select the menu item below.
- Press **◀** / **the blue function key** to select the menu item to the left.
- Press **▲** / **the green function key** to select the menu item above.
- Press **OK** to enter the selected menu item.

Activated menu items are highlighted by colour.



The function keys may call different functions, dependent on the regarding menu.

Instead of changing a value by using the keys **▶** und **◀**, with many menu items you can also press the **OK** key, select a new value from the list, and confirm such value by again pressing the **OK** key.

5 Aligning the Satellite Dish

1. Press the **MENU** key.
2. Use the keys **◀** / **▶** and **▲** / **▼** to select the menu item **TP SEARCH** and confirm your selection with **OK**.
3. Choose the desired satellite in the setting field with the keys **◀** / **▶**.

¹ OSD = On Screen Display

- Go to **LNB Freq** and select the right value for the used LNB. You also can change the LNB frequencies with the **blue function key**.

Possible values for <i>LNB Freq</i> (MHz)		
5150	10600	Universal (9750 - 10600)
5750	10700	UnicableA (9750 - 10600)
5950	10750	UnicableA (10200)
9750	11250	UnicableB (9750 - 10600)
10000	11300	UnicableB (10200)
10050	5150 - 5750	
10450	5750 - 5150	

- If you use a multifeed antenna, go to **DiSEqC1.0** and select the port for the selected satellite. You also can change the DiSEqC1.0 port with the **yellow function key**.
- If you can receive signals from more than four satellites select **DiSEqC1.1²** and set the port for the selected satellite. Factory setting is **Disable**.
- Go to **Transponder** and use the keys ◀ / ▶ to select the transponder, broadcasting the channel, which you want to use for adjusting your antenna. Signal strength and signal quality (of the selected transponder) are displayed on the bottom of the window. Alternatively go to **Transponder**, press **OK**, select the corresponding transponder from the list and confirm by pressing **OK**.
- Turn the dish until the **LOCK-LED** lights, or the bargraph displays signal strength and signal quality. If the **LOCK-LED** lights there is also an acoustic signal



In the menu **OSD Setting** → **Beeper** you can set, whether an acoustic signal should be output (*On*) or not (*Off*), if a signal is found.

- Fixate the Dish in the position with the best signal strength.
- Vary the angle of inclination until the bargraph displays even more signal strength and signal quality.
- Press **EXIT**, several times to get to the TV mode. In the info window on the bottom of the window signal strength **S**, signal quality **Q**, **FEC** and **VBER** (bit error rate after Viterbi) are shown.
- Fixate the Dish in the position with the best **VBER** quality.



The **VBER** value with good reception is 10E-8 (so almost 0). The higher **VBER** is, the worse is the signal (e. g. antenna wrong aligned).

² DiSEqC1.1 supports 16 satellite positions

6 Menu TP Search

1. Press **MENU**.
2. Use the keys ◀ / ▶ and ▲ / ▼ to select the menu **TP Search** and press **OK**.

In the menu **TP Search** a list of the stored satellites is shown.

10 satellites are displayed on each page. To display further satellites use the keys ▲ and ▼.

TP Search		
1	Astra 1	E19.2
2	Hot Bird 6/8/9	E13.0
3	Turksat 2A/3A	E42.0
4	Astra 3A/3B & Th	E23.5
5	Amos 2/3	W4.0
6	Astra 4A	E4.8
7	C_Thor 5/6	W0.8
8	Ku_Thor 5/6	W0.8
9	C_Atlantic Bird	W5.0
10	Ku_Atlantic Bird	W5.0
Edit Add Delete ↓		

6.1 Renaming a Satellite

1. Select the satellite you'd like to rename in the list with the keys ▲ and ▼.
2. Press the **blue function key (Edit)**. A screen keyboard opens.
3. Give a new name for the satellite. Use the keys ◀/▶ and ▲/▼ to mark a letter and confirm each letter with **OK**.
4. Repeat until you have the desired name.
 - Press the **blue function key (Delete)** to delete the respectively selected character.
 - Press the **yellow function key (CAPS)** to switch between upper case and lower case.
 - Press the **red function key (Cancel)** to discard the changes made so far and to close the window **Rename**.
 - Press the **green function key (OK)** to accept the changes made so far and to close the window **Rename**.

6.2 Adding a Satellite

1. Press the **green function key (Add)**. A screen keyboard opens.
2. Give a name for the new satellite. Use the keys ◀/▶ and ▲/▼ to mark a letter and confirm each letter with **OK**.
3. Repeat until you have the desired name.
 - Press the **blue function key (Delete)** to delete the respectively selected character.
 - Press the **yellow function key (CAPS)** to switch between upper case and lower case.
 - Press the **red function key (Cancel)** to discard the changes made so far and to close the window **Rename**.
 - Press the **green function key (OK)** to accept the changes made so far and to close the window **Rename**.




The transponder list of the new satellite is empty. Create a new transponder as described below (Adding a new Transponder).

6.3 Deleting a Satellite

1. Select the satellite you'd like to delete from the list with the keys ▲ and ▼.
2. Press the **red function key (Delete)**.
3. Use the keys ◀/▶ to mark the button **Yes** and confirm with **OK** to delete the satellite from the list.
Mark the button **No** and confirm with **OK** to go back to the menu **TP Search**, without deleting the satellite.

6.4 Searching for a Transponder

- Select with the keys ▲ and ▼ the satellite on which you'd like to look for a transponder.
- Press **OK**.
- With the keys ◀ and ▶ you can know change once more the satellite.

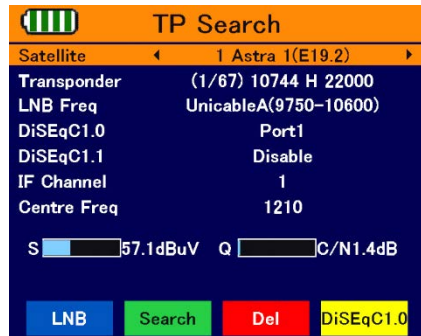

- Go to **LNB Freq** and select the right value for the used LNB. The possible values are listed in the section “Aligning the Satellite Dish”. You also can change the LNB frequencies with the **blue function key**.
- If you use a multifeed antenna, go to **DiSEqC1.0** and select the port for the selected satellite. You also can change the DiSEqC1.0 port with the **yellow function key**.
- If you can receive signals from more than four satellites select **DiSEqC1.1** and set the port for the selected satellite. Factory setting is **Disable**.

6.5 Deleting a Transponder

1. Select in the sub menu **TP search** with the keys ▲ and ▼ the satellite on which you'd like to delete a transponder and press **OK**. With the keys ◀ and ▶ you can know change once more the satellite.
2. Select with the keys ▲ and ▼ the line **Transponder** and press **OK**.
3. Select with the keys ▲ and ▼ the Transponder you want to delete and press **OK**.
4. Press the **red function key (Del)**.
5. Use the keys ◀/▶ to mark the button **Yes** and confirm with **OK** to delete the transponder from the list.
Mark the button **No** and confirm with **OK** to go back to the menu **TP Search**, without deleting the transponder.

6.6 Adding a Transponder

1. Select in the sub menu **TP search** with the keys ▲ and ▼ the satellite on which you'd like to add a transponder and press **OK**. With the keys ◀ and ▶ you can now change once more the satellite.
2. Select with the keys ▲ and ▼ the line **Transponder** and press **OK**.
3. Select with the keys ▲ and ▼ the last position **New TP** in the list and press **OK**. The window **Add TP** opens.
 - Select with the keys ▲ and ▼ the line **Frequency** and insert with the numeric keys the frequency (in MHz) of the new transponder.
 - Select with the keys ▲ and ▼ the line **Symbol Rate** and insert with the numeric keys the symbol rate (in kS/s) of the new transponder.
 - Select with the keys ▲ and ▼ the line **Polarity** and insert with the keys ◀ and ▶ the polarization of the new transponder.
H = horizontal
V = vertical
4. Press the **green function key (OK)** to confirm the new transponder.

6.7 Searching Channels

1. Select in the sub menu **TP search** with the keys ▲ and ▼ the satellite containing the transponder on which you'd like to look for receivable channels and press **OK**.
2. Select with the keys ▲ and ▼ the line **Transponder** and press **OK**.
3. Select with the keys ▲ and ▼ from the list the transponder on which you'd like to look for receivable channels and press **OK**.
4. Go to **LNB Freq** and select the right value for the used LNB. The possible values are listed in the section "Aligning the Satellite Dish". You also can change the LNB frequencies with the **blue function key**.
5. If you use a multifeed antenna, go to **DiSEqC1.0** and select the port for the selected satellite. You also can change the DiSEqC1.0 port with the **yellow function key**.
6. If you can receive signals from more than four satellites select **DiSEqC1.1** and set the port for the selected satellite. Factory setting is *Disable*.
7. Press the **green function key** to go to the search window:
 - Select **Only FTA**³ to determine if scan should be made only for FTA channels (*Yes*) or for all channels (*No*).
 - Select at **Scan Channel** if you want to perform scan only for TV channels, only for radio channels or for TV + radio channels..
 - Select at **Network Search** if you want to search for an individual channel (*No*) or all channels of a channel network (*Yes*), e.g. PRO7, SAT1, KABEL1, SIXX.
 - Press **OK** to start the channel search.
 - Press the **red function key** to stop the search at anytime.

Found programs are attached to the rear of the channel list.

³ FTA = Free To Air = unencrypted channels

6.8 NIT

The smartmeter S1 is equipped with NIT. NIT means Network Information Table and is transmitted in the data stream of the satellite. It contains data regarding to transponders and channels, such as frequency, sound carrier or symbol rates.

To align a satellite antenna you can also use the NIT display. When a signal is found worthy to receive, the NIT display tells you to which satellite your antenna is actually aligned.

Examples:

TP Search	
Satellite	1 Astra 1(E19.2)
Transponder	(1/67) 10744 H 22000
LNB Freq	Universal(9750-10600)
DiSEqC1.0	Port1
DiSEqC1.1	Disable
S	54.1dBuV
Q	C/N11.2dB
Astra 1(E19.2)	
LNB	Search
Del	DiSEqC1.0


TP Search	
Satellite	1 Astra 1(E19.2)
Transponder	(68/68) 10723 H 29900
LNB Freq	Universal(9750-10600)
DiSEqC1.0	Port2
DiSEqC1.1	Disable
S	70.0dBuV
Q	C/N10.4dB
Hot Bird 6/8/9(E13.0)	
LNB	Search
Del	DiSEqC1.0



In order that a satellite can be found, the remaining data, especially transponder data and DiSEqC port must be correct.

7 Menu Satellite Identify

1. In TV mode press the **MENU** key (or navigate to main menu).
2. Select with the keys **◀/▶** and **▲/▼** the sub menu **Satellite Identify** and confirm with **OK**.

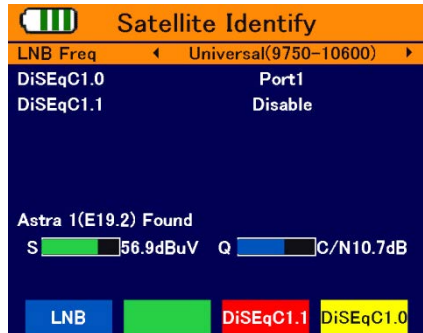

3. Go to **LNB Freq** and select the right value for the used LNB. The possible values are listed in the section “Aligning the Satellite Dish”. You also can change the LNB frequencies with the **blue function key**.
4. If you use a multifeed antenna, go to **DiSEqC1.0** and select the port for the selected satellite. You also can change the DiSEqC1.0 port with the **yellow function key**.
5. If you can receive signals from more than four satellites select **DiSEqC1.1** and set the port for the selected satellite. You also can change the DiSEqC1.1 port with the **red function key**. Factory setting for **DiSEqC1.1** is *Disable*.

You can see on the screen, which satellite is currently received. Also, signal strength and signal quality are displayed.



Satellite Identify uses the transponder lists stored in the smartmeter S1.


8 Menu Packet Control

In this menu you can

- display signal strength and signal quality of five consecutive transponders as well as
- perform a channel search.

8.1 Showing Measurement Values of five Transponders

1. In TV mode press the **MENU** key (or navigate to main menu).
2. Select with the keys ◀/▶ and ▲/▼ the sub menu **Packet Control** and confirm with **OK**.

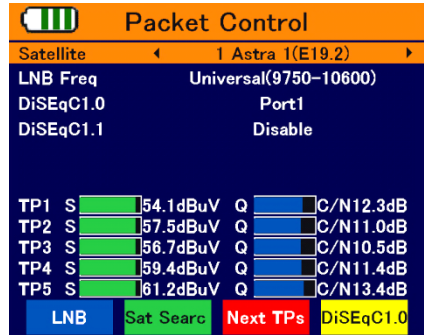

3. Select at **Satellite** with the keys ▶ and ◀ the satellite where you can find the transponders to display.
4. Go to **LNB Freq** and select the right value for the used LNB. The possible values are listed in the section “Aligning the Satellite Dish”. You also can change the LNB frequencies with the **blue function key**.
5. If you use a multifeed antenna, go to **DiSEqC1.0** and select the port for the selected satellite. You also can change the DiSEqC1.0 port with the **yellow function key**.
6. If you can receive signals from more than four satellites select **DiSEqC1.1** and set the port for the selected satellite. Factory setting is *Disable*.

You can see on the screen signal strength **S** and signal quality **Q** of five consecutive transponders.

- Press the **red function key (Next TPs)** to display the values of the next five transponders in the transponder list.

8.2 Searching Channels

- Press the **green function key** to open the window **Single Satellite Search** where you can search for channels on one satellite.



You also can reach the window **Single Satellite Search** by pressing of the key **SCAN**.

- Select at **Satellite** with the keys ◀ and ▶ the satellite on which you want to perform the scan.
- Select **Only FTA⁴** to determine if scan should be made only for FTA⁴ channels (*Yes*) or for all channels (*No*).
- Select at **Scan Channel** if you want to perform scan only for TV channels, only for radio channels or for TV + radio channels..


⁴ FTA = Free To Air = unencrypted channels

- Select at **Network Search** if you want to search for an individual channel (*No*) or all channels of a channel network (*Yes*), e.g. PRO7, SAT1, KABEL1, SIXX. The item **Network Search** is only active, if you selected the **Scan Mode Preset Scan**.
- Select the scan mode at the menu item **Scan Mode**:
 - *Preset Scan* (Standard Scan): considering only the frequencies included in the TP list (of the regarding satellite).
 - *Auto Scan* (Blind Scan): considering all frequencies, regardless of whether they are included in the TP list or not.
- Press the **green function key** to start the channel scan.
- Press the **red function key** to stop the search at anytime.

9 Menu DiSEqC Search

In this menu you can scan the DiSEqC switch. As result of the scan you see on which port which Satellit is received.

1. In TV mode press the **MENU** key (or navigate to main menu).
2. Select with the keys **◀/▶** and **▲/▼** the sub menu **DiSEqC Search** and confirm with **OK**.

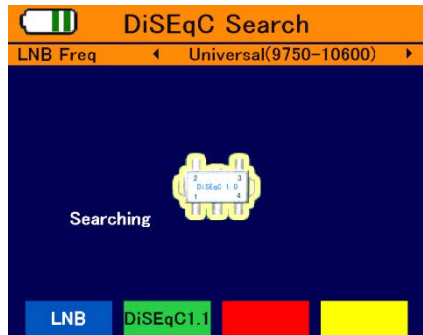

The DiSEqC search begins automatically. One after another, all four DiSEqC1.0 ports are scanned. After completing the scan, the screen might look like this:

- Press the **blue function key (LNB)** to select the right value for the used LNB.




- If you can receive signals from more than four satellites, press the **green function key** to switch between DiSEqC1.0 and DiSEqC1.1.

10 Menu DiSEqC Motor Search

This menu is used to set up a motor antenna and its control system.

In all menu windows (e. g. moving dish) you see signal strength **S** and signal quality **Q**.

1. In TV mode press the **MENU** key (or navigate to main menu).
2. Select with the keys ◀/▶ and ▲/▼ the sub menu **DiSEqC Motor Search** and confirm with **OK**.

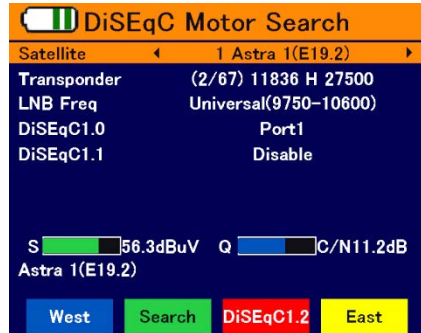

- Press the **blue function key** to turn the satellite dish to the west.
- Press the **yellow function key** to turn the satellite dish to the east.
- Press the **green function key** to start a channel search for the current transponder (see section 6.7 „Searching Channels“). Since you use DiSEqC1.2 or USALS for the antenna control, normally you can ignore the lines **DiSEqC1.0** and **DiSEqC1.1**. There are special cases (e. g. cascading of DiSEqC switches) where additionally to DiSEqC1.2 you need **DiSEqC1.1**.

- Press the **red function key** to set the details for the motor control:
 - Select at **Satellite** with the keys ◀ and ▶ the satellite for the following settings should be valid.



- Select **Transponder** to set the transponder which should be reference for the antenna position (generally the transponder which broadcasts your favorite channel).
- Select **Motor Type** to set the used control technique. Select between **DiSEqC1.2** and **USALS** (depending on the used motor). Depending on your choice, different settings are available.

10.1 DiSEqC 1.2

- Select **Position No & Save** to set a position number as which the current satellite (the current antenna position) will be saved.

- Select **Go To X** to call a position from which you want start the settings (the value *Reference* is the zero position).
- Select **Save** and move the dish with the keys ► and ◀ to the west or the east. Look for the maximum values of signal strength and signal quality which are shown at the bottom edge of the screen.
- Then press **OK** to save the found position.
- If necessary, repeat these steps for other satellites / transponders.
- Select **Recalculation** and press **OK** to discard all settings and define once more the antenna positions. A query window opens. Confirm the deletion with the **green function key (Yes)** or cancel it with the **red function key (No)**.


10.2 USALS

- Select **Local Longitude** to enter the longitude of your antenna's position with the numeric keys **0 ... 9**.
- Select **Local Latitude** to enter the latitude of your antenna's position with the numeric keys **0 ... 9**.

11 Menu Spectrum

In this submenu, you can check the different transponders across the entire spectrum.

1. In TV mode press the **MENU** key (or navigate to main menu).
2. Select with the keys ◀/▶ and ▲/▼ the sub menu **Spectrum** and confirm with **OK**.

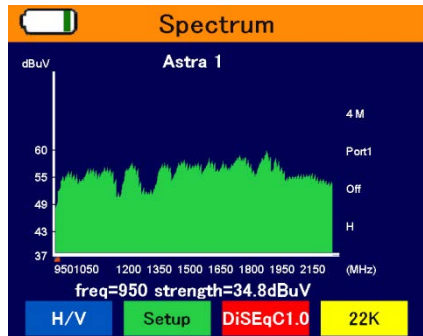

- Press the **blue function key** to switch the polarization between horizontal (**H**) and vertical (**V**).
- Press the **green function key** to change the sample rate:
 - 4 M: very exact scan,
 - 8 M: middle precision
 - 16 M: less precise



The more accurate the scan, the longer it takes to capture the entire frequency range.

- Press the **red function key** to select the DiSEqC port and thus the satellite.

- Press the **yellow function key** to set the 22 kHz control voltage for the switch between high band and low band:
 - On* Permanent on,
 - Off* Permanent off,
 - Auto* automatic

The permanent settings are required, for example, for certain antenna systems or to avoid interferences.

12 Menu Watch Program

To check the TV reception, you can put the smartmeter S1 in the TV mode.

- In the main menu select with the keys ◀/▶ and ▲/▼ the sub menu **Watch Program** and confirm with **OK**.
or
press **EXIT** in the main menu to switch to TV mode.



After the first switch-on (or after resetting to factory settings), no programs are stored, the channel list is empty. You receive an error message: „**No Channel!**“

In addition to the live TV picture an infobar appears with the following information:

- Satellite, current date, current time
- Position in the current channel list, channel name with video PID, audio PID, PCR PID.
- Transponder data: frequency / symbol rate / polarization, error correction rate FEC, bit error rate VBER (bit error rate after error correction)
- Signal strength S, signal quality Q
- Press **EXIT** to open a toolbar (with four buttons) instead of the infobar.
- Press the **blue function key (Information)** to open the infobar.
- Press the **green function key (Full Screen)** to close the toolbar and to show only live TV.
- Press the **red function key (Mute)** to switch off the TV sound.
- Press the **yellow function key (Audio)** to select the audio mode:
Use the keys ▶ and ◀ to select between: *Left, Right, Stereo, Mono*
and
the keys ▲ and ▼ to select another language or Dolby AC3 (Dolby Digital).



Both selection possibilities are depending on the current channel. When selecting AC3 there is no TV sound. This option is only for verifying such programs / shows.

12.1 Programmwahl

You have several possibilities to select a channel:

- Direct channel selection;
- Channel selection via selection window; and
- Channel selection via search function;

as explained in the following sections.

12.1.1 Direct Channel Selection

➤ Select the desired channel by using the keys ▲ and ▼.

With each change of channel, an information window with information on the current channel will be displayed (see above).

12.1.2 Channel Selection via Selection Window

1. Press the **OK** key to display a selection window with all available channels.
2. Select the channel list with the desired channel by using the keys ► and ◀. You can select between a channel list for all satellites, channel lists for each satellite and you favorite lists.



You can create favorites lists only with the channel_list_editor_S1 (see "edit channel list using the editor program", page 30).

3. Select the channel to be displayed by using the keys ▲ and ▼ and confirm your selection by pressing **OK**. The channel will be correspondingly switched.

12.1.3 Channel Selection via Search Function

The channel lists can be quite comprehensive; correspondingly, the smartmeter S1 offers the possibility to search for channels in the list:

1. Press the **FIND** key to open the window **Find** with an on-screen-keyboard.
2. Select a character by using the keys ◀/► and ▲/▼ and respectively confirm by pressing **OK** to accept such character.
3. As soon as the first selected character has been confirmed by pressing **OK**, a second window will open, showing all channels starting with this character (in most cases, the first character is a letter).

Press **EXIT** to close the window **Find**, provided that selection is sufficiently arranged for your purposes. Now, you can select the desired channel in the other window by using the keys ▲ and ▼, and confirm by pressing **OK**.

4. Return to entry of characters (see step 2) to further limit channel selection.

12.2 Sorting the Channel List

1. In TV mode press **OK**.

2. Press the **blue function key (Sort)** to open a window for determining sorting criteria.
3. Select **Name(A-Z)** to sort the channel list in ascending alphabetical order.
or
 Select **Name(Z-A)** to sort the channel list in descending alphabetical order.
or
 Select **Free/Scramble** to first list all free channels and then all encrypted channels in the channel list.
4. Press **OK** to confirm.
5. Press the **yellow function key (Play)** to go back to the TV mode.

12.3 Switching Between TV Channel List and Radio Channel List


1. In TV mode press **OK**.
2. Press the **green function key (TV/Radio)** to switch between TV channel list and radio channel list.
3. Press the **yellow function key (Play)** to go back to TV mode or radio mode.

12.4 Deleting a Channel from the Channel List

1. In TV mode press **OK**.
2. Select with the keys **▶** and **◀** the channel list including the channel you want to delete. If necessary, switch between TV channel list and radio channel list.
3. Select with the keys **▲** and **▼** the the channel you want to delete.
4. Press the **red function key (Delete)** to delete the channel. A safety query opens:
 - Press the **green function key (Yes)** to complete the deletion.
 - Press the **red function key (No)** to cancel the deletion and go back to the channel list.
5. Press the **yellow function key (Play)** to go back to TV mode.

13 Menu Settings

1. In TV mode press the **MENU** key (or navigate to main menu).
2. Select with the keys **◀/▶** and **▲/▼** the sub menu **Settings** and confirm with **OK**. The window **OSD Setting** opens.

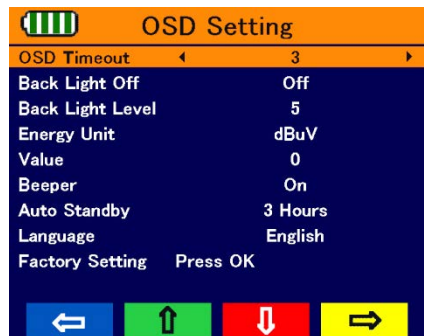

13.1 Hiding the OSD

- Select **OSD Timeout**, to set with the keys ◀ and ▶ the number of seconds when the OSD should be hidid. You can select values between 1 and 10 seconds. Factory setting is 3s.

13.2 Switching off the Screen

- Select **Back Light Off** to set with the keys ◀ and ▶ the number of minutes when the screen should be switched off. You can select values between *Off* and *30 Minutes*. Factory setting is *5 Minutes*.

13.3 Setting Display Brightness

- Select **Back Light Level** to set with the keys ◀ and ▶ the display brightness. You can select values between 1 (dark) and 5 (light). Factory setting is 5.

13.4 Selecting Energy Unit

- Select **Energy Unit** to set with the keys ◀ and ▶ in which unit you want to show the voltage measures during spectrum analysis. You can select between *dBm* and *dBμV*. Factory setting is *dBμV*.

13.5 Setting Volume Level

- Select **Value** to set with the keys ◀ and ▶ the level of the TV sound plus the beeper sound level when a signal is found. You can select values between 10 and 100. Factory setting is 50.

13.6 Switching On/Off the Beeper

- Select **Beeper** to set with the keys ◀ and ▶ whether there should be a beeper sound when a satellite signal is found (*On*) or not (*Off*). Factory setting is *On*.

13.7 Activating the Automatic Standby Function

- Select **Auto Standby** to switch on or switch off the automatic standby function, and if on after which time the meter should go to standby mode, using the the keys ◀ and ▶. You can select values between *Off* und *3 Hours*. Factory setting is *3 Hours*.

13.8 Selecting the OSD Language

- Select **Language** to set with the keys ◀ and ▶ the OSD language. Factory setting is *Deutsch*.

13.9 Restoring Factory Settings

1. Select **Factory Setting** and press **OK** to restore factory settings.
2. Press the **green function key (Yes)** to complete the restore
or
press the **red function key (No)** to cancel the restore and go back to the menu window.



Note:


A factory reset will erase all channels in your channel list. How to implement a “reset-resistant” channel see section "editing the channel list", page 29).

14 Menu PC Update

The sub menu **PC Update** is mainly intended to update the operating software via the USB port.

Beside that you will also have access to the built-in media player.

1. In TV mode press the **MENU** key (or navigate to main menu).
2. Select with the keys **◀/▶** and **▲/▼** the sub menu **PC Update** and confirm with **OK**.The window **Upgrade by USB** opens.

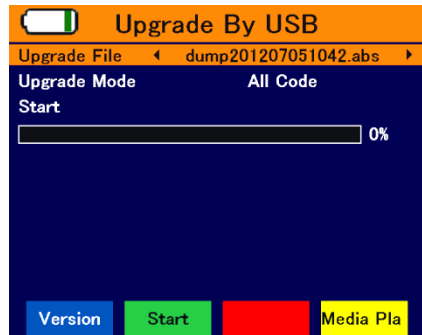

14.1 Showing the Software Version

- Press the **blue function key (Version)** to display software and hardware version of your smartmeter S1.

14.2 Performing a Software Upgrade



CAUTION!

- Make absolutely sure that the smartmeter S1 is supplied during the upgrade.
- During the update supply the smartmeter S1 with electrical power by power supply unit.

1. Look for the current software release packed as a zip archive in the support area of www.smart-electronic.de.
2. Unpack it and save the file with the extension *.abs on your USB disk.



Tips and hints to extract and update can be found in the support area of www.smart-electronic.de ".

3. Connect the USB disk to the smartmeter S1.
4. Use the keys ▲ and ▼ to select the line **Upgrade File**.
5. Use the keys ◀ and ▶ to select the new software file (*. abs) (must be in the root directory of the connected USB disk!).
6. Use the keys ▲ and ▼ to select the line **Upgrade Mode**.
7. Make sure that the **Upgrade Mode** is either *All Code* or *Main Code*. If necessary, you must change the value by pressing the keys ◀ and ▶. With *All Code* the software, the current channel list and the "factory" channel list (default setting is empty) are newly loaded into the smartmeter S1, with *Main Code*, only the software is loaded.
8. Use the keys ▲ and ▼ to select the button **Start** and press OK or press the **green function key (Start)** to start the upgrade process. You will see a security warning asking if you really want to burn the flash memory:
 - Press the **green function key (Yes)** to start the Upgrade. After it is completed, the meter will be restarted.
 - Press the **red function key (No)** to cancel the Upgrade and go back to the window **PC Update**.



WARNING!

- Never switch off the smartmeter during the upgrade process.

14.3 Editing the Channel List

You can save the channel list of the smartmeter S1 on a USB disk, edit it in conjunction with the appropriate editor program⁵ and then load it from USB disk. Also, you can create a "fixed" channel list that is preserved even at a factory reset.

14.3.1 Saving the Channel List on a USB disk

1. Select - with a connected USB disk - in the window **Upgrade By USB** with the keys ▲ and ▼ the line **Upgrade Mode** and then use the keys ◀ and ▶ to select the value *Dump*. The file name (ending in ". abs") appears in the line **Upgrade File**.

In this file these items are stored:

- the operation software,
- the current channel list ("your channel list") and
- the "factory" channel list (default setting is empty).

⁵ Kanallisten-Editor_S1.zip, available free of charge in the support area (German) of www.smart-electronic.de under Zubehör / Antenne / smartmeter S1 / smartmeter S1 Downloads.

2. Select with the keys ▲ and ▼ the button **Start** and press **OK** or press the **green function key (Start)** to start the saving.

14.3.2 Editing the Channel List with the Editor Program

1. Download from www.smart-electronic.de (Support / Zubehör / smartmeter S1 / smartmeter S1 Downloads) the compressed file "Kanallisten-Editor_S1.zip" and save it on your PC.

"Kanallisten-Editor_S1.zip" contains these files:

- Kanallisten-Editor_S1.exe
 - script.ini
 - User_Manual.pdf (user manual in English)
 - BA_Kanallisten-Editor_S1.pdf (user manual in German)
2. Unzip the zip file into a directory of your choice.
 3. Start the program "Kanallisten-Editor_S1.exe".

With the channel list editor, you can

- load both your channel list (User Database) or the work list (Default Database) which you have previously saved on your USB disk,
- move channels in the channel list,
- edit channel parameters,
- create up to 32 favorites lists and
- save the edited list as an "own" channel list (User Database) as well as a new "factory" list (Default Database) and then load it into your smartmeter S1 (as *User Database* or *Default Database*).



CAUTION!

- When delivered, the "factory list" is empty, i.e. there are no channels available.

14.3.3 Loading the Channel List from USB

14.3.3.1 Loading the "Own" Channel List from USB


1. Select - with a connected USB disk - in the window **Upgrade By USB** with the keys ▲ and ▼ the line **Upgrade File**.
2. Select with the keys ◀ and ▶ the "channel list file" (*.abs), containing the "own" channel list you want to transfer to your smartmeter S1 (must be located in the root directory of the USB disk!).
3. Select with the keys ▲ and ▼ the line **Upgrade Mode** and select with the keys ◀ and ▶ the value *User Database*.
4. Select with the keys ▲ and ▼ the line **Start** and press **OK** or press the **green function key (Start)** to start the loading.

14.3.3.2 Loading the “Factory” Channel List from USB

1. Select - with a connected USB disk - in the window **Upgrade By USB** with the keys ▲ and ▼ the line **Upgrade File**.
2. Select with the keys ◀ and ▶ the “channel list file” (*.abs), containing the “factory“ channel list you want to transfer to your smartmeter S1 (must be located in the root directory of the USB disk!).
3. Select with the keys ▲ and ▼ the line **Upgrade Mode** and select with the keys ◀ and ▶ the value *Default Database*.
4. Select with the keys ▲ and ▼ the line **Start** and press **OK** or press the **green function key (Start)** to start the loading.

14.4 Media Player

- Press in the window **Upgrade By USB** the **yellow function key (Media Player)** to open the window **Media Player**.

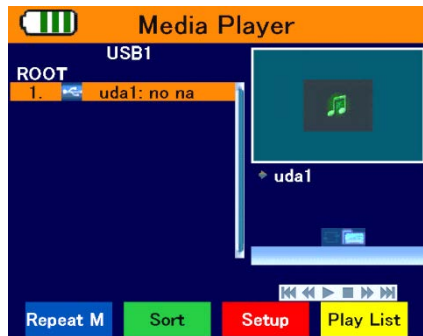

The call of the Media Player is only possible when a USB disk is connected.




14.4.1 Playback of a Music File

1. Press **OK**. The present directories and files will be displayed.
2. Select the track to be played by using the keys ▲ and ▼ (press **OK** to open a directory).
3. Press **OK** to start playback.
4. Use the function keys to control playback:

Key	Function
Blue function key (FB)	Fast backward as long as the key is pressed.
Green function key (Play/Pause)	Stop playback and continue st the same position
Red function key (FF)	Fast forward as long as the key is pressed.
Yellow function key (Stop)	Stop playback.

14.4.2 Playback Mode

 - Press the **blue function key (Repeat M)** to change the playback mode. The regarding symbol is shown at the right half of the screen.

Symbol in Media Player-window	Meaning
	All tracks in the current directory are played and repeated in the displayed order.
	Single track is played and repeated.
	All tracks in the current directory are played in random order and are then repeated.

14.4.3 Playback of a Image File

1. Press **OK**. The present directories and files will be displayed.
2. Select the image file to be displayed by using the keys **▲** and **▼** (press **OK** to open a directory). At the right half of the screen a preview image will be displayed.
3. Press **OK** to switch to full screen mode.



By default, the playback mode for images is slide show mode.

14.4.4 Configure a Slide Show

- Press in the window **Media Player** the **red function key (Setup)** to configure a slide show:
 1. Select with the keys **▲/▼ Slide Show Time** (first line) and then select with the keys **◀/▶** the time period between displaying of two subsequent images (1 to 9 seconds).
 2. Select with the keys **▲/▼ Slide Show Repeat** (second line) and then set with the keys **◀/▶** whether the slide show should start again from the beginning after displaying the last image.
 3. Select the line **Save – Cancel** by using the keys **▲/▼**, and then use the keys **◀/▶** to determine if the settings should be saved or discarded. You will be directed back to the image list.

14.4.5 **Sorting Files**

- Press in the window *Media Player* the **green function key (Sort)** to sort the displayed files. There are these possibilities:

Value	Meaning
<i>Default</i>	The files in the current directory are displayed in the order in which they are stored on disk.
<i>A-Z</i>	The files in the current directory are displayed in ascending alphabetical order.
<i>Z-A</i>	The files in the current directory are displayed in descending alphabetical order.
<i>Image</i>	First all image files of the current directory are displayed, then all other files.
<i>Music</i>	First all music files of the current directory are displayed, then all other files.

14.4.6 **Playlists**

14.4.6.1 **Creating a Playlist**

- Select a track by using the keys ▲/▼ and press the **key 2** to add this to the regarding playlist (favorite list). A music file will automatically be added to the music playlist, an image file will be added of the image playlist.
- Press the **key 0** to add all music files of the current directory to the music playlist.
- Press the **key 1** to add all image files of the current directory to the image playlist.

14.4.6.2 **Calling for a Playlist**

- Press in the window *Media Player* the **yellow function key (Play List)** to call for the playlists. A query opens:
 - Press the **green function key (Music)** to call for the music playlist.
 - Press the **red function key (Image)** to call for the image playlist.

14.4.6.3 **Playback Files from the Playlist**

1. Select in the window *Music / Image Play List* with the keys ▲/▼ a file to be played / displayed.
2. Press the **green function key (Play)** to play / display the marked file.

14.4.6.4 **Deleting a File from the Playlist**

1. Select in the window *Music / Image Play List* with the keys ▲/▼ a file to be deleted.
2. Press the **yellow function key (Delete)** to mark the selected file for deletion.
3. When leaving the window with EXIT a safety query opens:
 - Press the **green function key (Yes)** to complete the deletion.
 - Press the **red function key (No)** to cancel the deletion and go back to the playlist.

14.4.6.5 **Deleting all Files from the Playlist:**

1. Press in the window *Music / Image Play List* the **yellow function key (Delete)** to mark all files for deletion.

2. When leaving the window with EXIT a safety query opens:
 - Press the **green function key (Yes)** to complete the deletion.
 - Press the **red function key (No)** to cancel the deletion and go back to the playlist.

14.4.6.6 Saving a Changed Playlist

When leaving the Media Player (with **EXIT**) you will be asked whether the changed playlist should be saved to the USB disk:

- Press the **green function key (Yes)** to save the playlist.
- Press the **red function key (No)** to cancel the saving and go back to the window **Upgrade By USB**.




Die Dateinamen auf dem Datenträger sind:

- AMP_M für die Musik-Wiedergabeliste
- AMP_I für die Bild-Wiedergabeliste

15 Saving a Screenshot

If a USB data storage device is connected to the meter, you can save a screenshot of the display to the data storage device (e.g. to document measuring values).

- Press the  key.
A screenshot of the display is saved to the USB data storage device in a bmp file.

16 Operation in a Unicable System

16.1 About Unicable

The smartmeter S1 allows for changing the receiving mode to the unicable standard. This makes it possible - depending on the antenna type - to connect up to eight independent receivers to only one main line.

For this, an own IF channel and a corresponding frequency should be set for each receiver via the settings menu.

Allocation of channels and frequencies depends on the used LNBS and/or multi-switches.

The data sheet and the technical documentation of your LNB and/or multi-switch include an allocation table similar to the following table.

16.2 Allocation of IF channels and frequencies

Receiver	IF channel	Exemp. frequency (MHz)	Frequency (MHz)
Receiver 1	1	1284	
Receiver 2	2	1400	
Receiver 3	3	1516	
Receiver 4	4	1632	
Receiver 5	5	1748	
Receiver 6	6	1864	
Receiver 7	7	1980	
Receiver 8	8	2096	



- Enter the frequencies of your receiving system into the last column of the table so that all relevant information is quickly available. Rule of thumb: highest frequency → shortest cable path.

16.3 Installation

1. Select the menu item **TP Search** and press **OK**.
2. Select with the keys ▲ and ▼ a satellite and press **OK**.
3. Select with the keys ▲/▼ the line **LNB Freq.**
4. Select with the keys ◀ and ▶ the right value for the used Unicable LNB (according to the LNB specs).
5. Select with the keys ▲/▼ the line **DiSEqC1.0** and switch off the DiSEqC port use with the keys ◀ and ▶. Ensure that also **DiSEqC1.1** is *disabled*.
6. Select with the keys ▲/▼ the line **IF Channel** and set with the keys ◀ and ▶ the IF channel according to the specs of the unicable system.
7. Select with the keys ▲/▼ the line **Centre Freq** and set with the keys ◀ and ▶ the frequency according to the specs of the unicable system.

The assignment of channels and frequencies depends on the LNB or multiswitch manufacturer.



You can also input the **Centre Frequency** (if you selected a Unicable LNB) by pressing the **yellow function key**.

17 **Cleaning the Meter**



WARNING!

Danger of electric shock during cleaning:

- Before you start cleaning the meter, disconnect the meter from the power plug. Unplug the power plug from the socket.
- Never use a wet wipe to clean the meter or power plug.
- Make sure that meter and power plug are always kept dry.



CAUTION!

Risk of damages to the meter during cleaning:

- Always use solvent-free cleaning agents (no benzene, no thinner).
- Use a soft lint-free wipe to clean the housing and display of the meter. If the meter is very dirty, you may use mild, solvent-free soapsuds or spirit for cleaning.



You may use compressed air (max. 2 bar) to clear the keypad of dirt. Do not use any solvents for cleaning.

18 **Transporting and Storing the Meter**

If you want to transport the meter or if you intend to stop using the meter, handle the device as follows:

1. Disconnect the meter and all connected devices from the power supply.
2. Remove the aerial cable from the device.
3. Remove all other cables connected to the meter.
4. Put the meter, the cables and the user manual into the original packing.
5. Store the meter and the accessories in a dry and dust-free place.
6. Make sure that the meter is protected from frost.

19 Troubleshooting

Fault phenomenon	Probable reasons	Solutions
Device does not react.	The battery is empty.	Charge the battery.
Bad picture , block defect	The antenna is not adjusted to the satellite.	Adjust the antenna.
	The LNB is defect	Replace the LNB.
No or only faint signal.		Please check all cable connections, adjust the antenna.
No picture, no sound.	Display/ Sounds turned off	Turn on the display by pushing the F1 button. Turn on the sound by pushing the F2 or ► button.

If the troubleshooting suggestions do not help to correct a malfunction, please contact your specialist dealer.



You can find an FAQ-list with updated troubleshooting suggestions in the support section on our website at www.smart-electronic.de.

20 Disposal



CAUTION!

- Do not dispose of the meter or battery in your normal household waste.



- Ask your municipal authorities about how to dispose of the device in an eco-friendly and proper manner.
- Take spent batteries to an official collection point.



The WEEE⁶ symbol on the product or the product packing indicates that this is an electrical or electronic device.

Thus, you will contribute to protecting the environment and people's health. Material recycling helps to reduce the consumption of raw materials.

You can help to preserve the environment we live in.

⁶ The WEEE symbol stands for the Waste Electrical and Electronic Equipment Directive (2002/96/EC). This Directive was introduced to reduce the ever growing quantity of electronic waste from spent electrical and electronic devices. The aim is to avoid and reduce growing quantities of electronic waste and to promote eco-friendly disposal of such waste through extended manufacturer responsibilities.

21 Specifications

21.1 General

- 3,5" TFT-LCD, 720 x 576 pixel
- Physical separation of meter and battery (on-off-switch)
- Period of operation 4 – 8 hrs. (depending on operation mode)
- Display of signal strength and signal quality:
numeric / bar graph
- Spectrum Analyzer
- Signal with good reception: optical and acoustical

21.2 LNB/Tuner input

Frequency range	950 MHz to 2150 MHz
Input level	-65 dBm to -25 dBm
Input resistance	75 Ω
LNB power supply	13/18 V, max. 700 mA
LNB control signal	22 kHz
DiSEqC control	yes

21.3 System Resources

CPU-Frequenz	216MHz
SDRAM	16Mbyte DDR
FLASH	2MByte

21.4 Video Decoder

Front-End-Modul	QPSK
Symbol rate	2 Mbps to 45 Mbps
Data rate	up to 60 Mbit/s
Video resolution	720×576(PAL) 720×480(NTSC)
FEC:	1/2, 2/3, 3/4, 5/6, 7/8

21.5 Connections

Data interface	USB
LNB in	F connector
AV in (analog)	1 x Cinch (Composite video) 1 x Cinch (Audio mono)
DC in	Low-voltage socket / barrel connector

21.6 Power supply

Supply voltage	12.6 V
Li-Ion battery	2700 mAh
Supply voltage (charger)	175 - 250 V ~, 50/60 Hz

21.7 Dimensions and Weight

Length x Width x Height	10.5 cm x 16.5 cm x 4.5 cm
Weight	0.48 Kg

21.8 Temperatur

Operating temperature	0° C to +40° C
Storage temperature	-40° C to +65° C

22 Declaration of Conformity

The company smart electronic GmbH, Industriestraße 29, 78112 St. Georgen hereby declares conformity with the following guidelines and standards for this product:

- **Guideline for electromagnetic compatibility 2004/108/EG**
 - EN61326-1:2006
 - EN61000-3-2:2006+A1:2009+A2:2009
 - EN61000-3-3:2008
- **Guideline for low voltage 2006/95/EG**
 - EN61010-1:2001

